

WARNING

- Do not look directly at the light source or shine it to the eyes of others, as this will cause eye injury.
- This product is not a toy. Keep out of the reach of children. Children should be supervised to ensure they are not playing with the device.
- The LED light and battery of this rechargeable work light are not replaceable. Please do not attempt to open and disassemble the device.

CARE & CHARGING

- Before cleaning, please turn off the work light and disconnect the charger from the outlet.
- Use a soft and dry cloth to clean the work light. Do not use any form of abrasive cleaner or solvent for cleaning. Never immerse the product in liquids.
- The battery status of work light. **The indicator flashes when the battery is low or while charging. Running out of battery, the indicator light is off. Fully charged, the indicator light is green.**
- The light body can be rotated left and right. It has a snap-on design to effectively prevent internal cable entanglement and damage caused by excessive rotation. Please do not turn it excessively.
- If the battery indicator does not light up, please unplug the charger and try again or check the charging cable, charger, and power supply.
- In order to extend the life of the battery, please always charge the work light after use. If it is not used for a long time, the user should charge the work light every 3 months.

4

SPECIFICATIONS

Rechargeable Battery	3.7 V, 2600 mAh, Li-ion battery
Input	5V 1A
Charging Port	Type-C
CCT	6500 K
Material	ABS+TPE
Size	60*35*400 mm
Weight	0.24 kg

PACKAGING

1. Handheld LED Work Light × 1
2. USB C Charging Cable × 1
3. User Manual × 1

WARRANTY

This product is covered under a 1-year limited warranty. If you have any questions, please feel free to contact us.

5

adiding


HANDHELD LED WORK LIGHT USER MANUAL

Model: ZZ8830

Thank you for purchasing the Gooseneck Rechargeable Handheld Work Light. Please read these instructions carefully before using and retain them for future reference.


LIGHT MODES

By continuously pressing the On/Off button, the work light can be adjusted to 3 modes. Press the button in order: **Low-High-Torch-Off** (Keep pressing the button can turn off the light directly.)

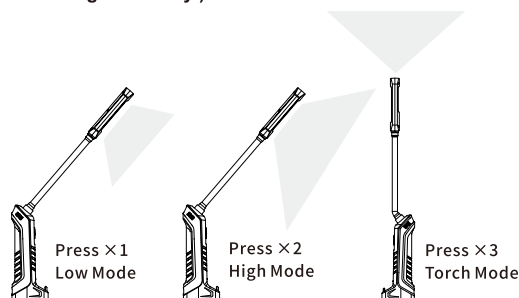

USAGE

1. Place the work light upright on a flat horizontal surface. Note: The neck should not be bent excessively, otherwise the working light will be unstable.
2. The work light can be attached to ferromagnetic surfaces. It has a magnet at the bottom. Please make sure it adsorbs stably to avoid falling.
3. There is a hook at the bottom of the work light. Please open the hook at the groove position, and then hang the work light on a rope or other object.

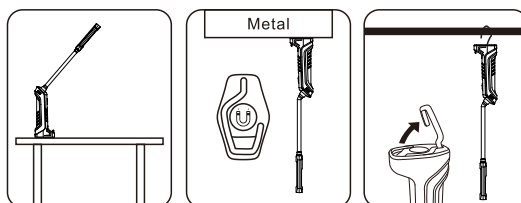

2

OPERATION


1. Before first use, please fully charge the work light. This usually takes **3.5-4 hours**.
2. Charge the work light. Plug the USB Type-C charging cable into the charging port of the work light. **(Comes with a 60cm USB C charging cable, charger head not included.)**
3. Turn on the work light to check the battery indicator status. When the indicator flashes, it means that the working light is low on power. Please charge the work light.
4. Please cover the charging port of the work light when fully charged.
5. The neck of the work light can be rotated 360° and bent at will, and with the light body that can rotate left and right, you can adjust the angle you want.
6. Press the On/Off button to choose the light modes.
7. Depending on your needs, decide how you want to place the work light. **(Note: When the work light is adsorbed on a magnetic object, please do not directly adjust the light angle. You need to remove it and then adjust the angle.)**

LIGHTING DURATION

- High Lighting Mode: 2-2.5 hours
- Low Light Mode: 4-4.5 hours
- Torch Mode: 12 hours

With prolonged use, the LED light will heat up slightly, which is normal. Please don't worry.

3

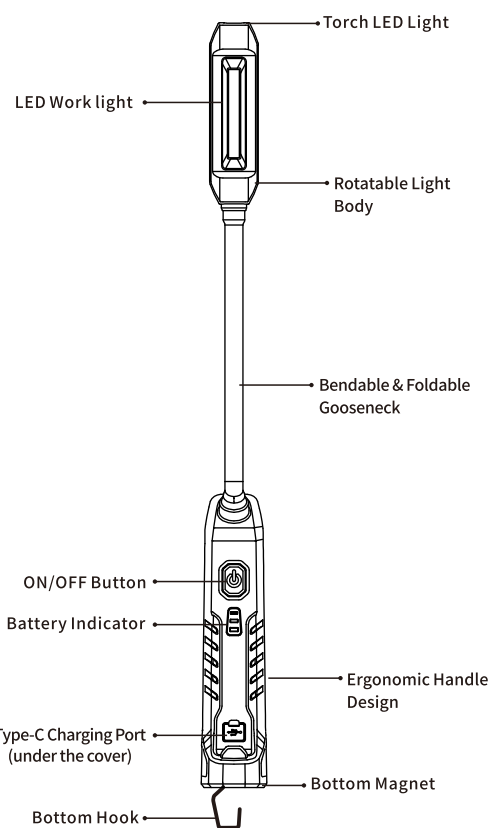

1