



INSTRUCTIONS FOR SETUP

To contact POMOLY Customer Service
Email: pomoly@support.com

1

1. Position your tent as desired. Lay the tent on the ground, and arrange the six corners into a regular hexagon.

2

2. Fix the six corners with the thick tent pegs. The pegs do not need to be inserted into the soil very deep, we need to adjust the position of the pegs to fix the tent later.

3

3. After fixing six corners, open one door of the tent. Stand in the middle of the tent and prop up the top of the tent with the centre pole. At the same time, we need erect the pole and keep it vertical to the ground.

4

4. Close the door and adjust the six corners until the tent is in a stable state. A properly tensioned tent ensures maximum water shedding and wind resistance.

5

5. In the wind and rain, please use the wind rope to fix the tent to make it more stable.