



* Auto leveler is installed on the left side of the fan cover.

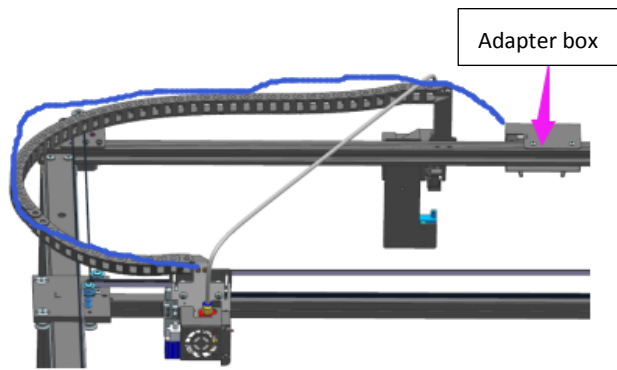

* The line of the auto-leveler is along the drag chain to the adapter board box at the port of the auto-leveler.

* Insert adapter board.

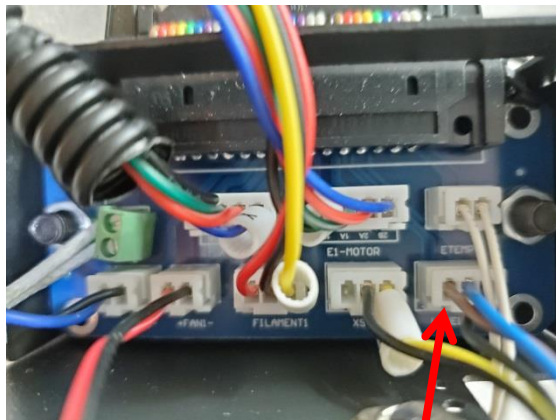

* Remove the adapter box and connect the auto-leveler port here.