

# User Manual



Safe driving Better life

# Content

Product Introduction.....	1
Notice Before Use.....	1
Structure.....	2
Function.....	2~3
Operation Guide.....	3~4
Recording Video.....	4
Taking Pictures.....	5
Playback.....	5~6
Settings.....	6~12
FAQ.....	12~14
Specification.....	14

## Product Introduction

 
Dash Camera is a device can record video audio information while driving, so with this device you can avoid trouble on road if somebody want to offend you, it can provide clear evidence in car accident. What's more, it can record wonderful view on the way when travel.

In order to use this device correctly more well, please read below guide carefully before you use.

## Notice Before Use

1. Please use original high-speed class 10 TF card to storage video, unless it may not be compatible with this device indicate "file error" or "SD card error", this device max support 32GB TF card.
2. You must format memory card when you use this device at first time, if memory card inside have other video or picture it can not be read by device.
3. Pay attention to the insert direction of the card. If insert card from the wrong side, it may damage the device and TF card.
4. Please remove off the car charger lighter with your car when you do not use this dvr device like parking, other wise your car engine start big instant electricity current probably burn out your dvr device.
5. This dvr device special use for car, please use it inside car with car charger, if no car charger recharging, its built-in battery very small, sometimes may can not be turned on successfully because of not enough electricity.
6. This device only allow electricity 5V 1A, so please DO NOT use any home charger or USB cable to recharge, you MUST use our original car charger to do recharging, because some home charger adapter have 12V output, it is not suitable, it probably burn out the dvr device. Or sometimes comes out strange squeaky noisy sound because of current not compatible.

## STRUCTURE

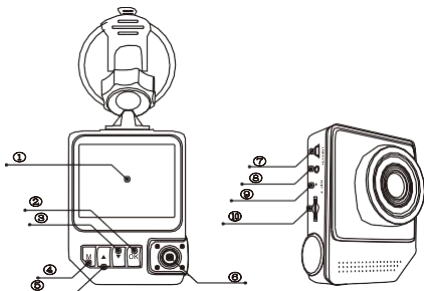

1. 2.31 Inch 2.OK Button 3. Down Button 4 . Mode/Menu Button 5. Up Button  
6. Inside Camera 7. USB Interface 8. AV IN 9. Reset 10.TF Card Slot

## FUNCTION

### 1. Cycle Recording

Cycle recording usually have 1 mins,3 mins,5 mins settings etc..., with this cycle recording function,the dvr camera can overwrite the old video (except the locked video) automatically,so that the sd card will not be full.

### 2. Motion Detect

Motion detect means when dvr is standby mode, if something move at the front of your car, dvr can detect it and start recording automatically. This function can protect your car more safely when you are not in your car.

### 3. G-SENSOR

G-Sensor means Gravity Sensor, if your car be shocked by external force suddenly like an accident, G-Sensor function can sense and lock the instant-aneous crash video immediately, this locked video can be as the evidence of accident, so it will not be overwritten by cycle recording function.

#### 4. Parking Monitor

When you park your car somewhere, turn on parking monitor function can make this dvr camera do recording while parking time to avoid any offend to your car like steal or scratch. At the same time, please do not forget set G-Sensor sensitive as high to work up this function, also must buy external power cable to do power supply while parking. (Details about power cable please see below)

Kindly remind: All car dvr inside battery very small can last working only around 2~3 minutes if no recharging, so Parking Monitor function can only be used together with power cable.


### Operation Guide

- 1 . **Power On/Off:** Long press power button around 2~3 seconds to turn on & off. If have TF card inside, once turn on it will enter into recording mode automatically.
- 2 . **Start/Stop recording:** In video mode, short press OK button start recording, short press it again, the recording will be stopped.
- 3 . **Photo :** In photo mode, short press OK button can take photo
- 4 . **Playback:** In playback mode, short press OK button can play the video.
- 5 . **OK button:** In video mode/photo mode/playback mode, short press menu button enter into menu, short press up/down to browse, short press OK button to confirm.
- 6 . **Up button:** In menu setting and camera switching mode, it is up function. In standby mode, keep press up button can make motion detection on/off. In playback mode, short press up button can play fast backward
- 7 . **Down button:** In menu setting and camera switch mode, it is down function. In video mode, short press down button can make audio on/off. ( Notice: the setting will be saved automatically, no need to set once again the next time ) In playback mode, short press down button can play fast forward

8. **Menu:** In standby mode, short press menu button, enter into main menu setting, short press UP/DOWN button, choose the options which you need, short press OK button to confirm. Settings finished, short press Menu button until exit.

9. **Mode button:** In standby mode, short press mode button can switch between different mode (Video/Photo/Playback)

## Recording video

In Video mode, in the upper left corner of the screen the  icon will be displayed, press OK button to start recording.



REC  icon will appear flashing in the upper left corner. To stop recording press OK button.



## Taking pictures

1. Press Mode (M) button.

In the upper left corner of the screen,



icon will be displayed.



2. Press OK button to take a picture.

**Note:** Hold the camera steady when taking pictures, otherwise the pictures will come out blurry.

## Playback

1. **Browsing files:** Press Mode (M) button to switch to playback mode, browse files using UP/DOWN buttons.  
To play back a file, press OK button.
2. **Delete and Protect:** In playback mode, long press Mode button, select "Delete", you will have two options: "delete current?" to delete the selected file, and "delete all?" to delete all the files on the memory card (except the protected files).  
Press OK button to select and confirm.



In playback mode, long press Mode button, select "Protect", you will have protect lock options ("lock one" to protect the selected file,"lock all" to protect all the files on the memory card) and protect unlock options ("unlock one" to unlock the selected files, "unlock all" to unlock all the protected files on the memory card).



## SETTINGS

 
### General settings

In any mode, long press Mode (M) button twice, to open general settings menu.






Browse settings using UP/DOWN buttons and OK button to edit and confirm a setting.

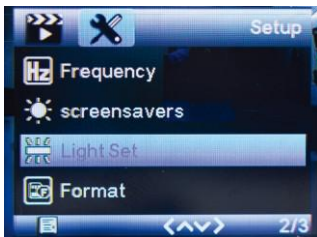

<b>Date/Time</b>	Set date and time
<b>Auto Power Off</b>	Select the automatic power off delay time
<b>Beep sound</b>	Activate / Deactivate button pressing sounds
<b>Language</b>	Select the menu display language

<b>Frequency</b> Screen refresh rate	50 Hz or 60 Hz
<b>Screensavers</b>	Select the screen turning off delay time
<b>Light set</b> Night mode	Activate / Deactivate night mode
<b>Format</b>	Select to format the memory card
<b>Default setting</b>	Select to revert to factory settings
<b>Version</b> Firmware version	Select to check system firmware version

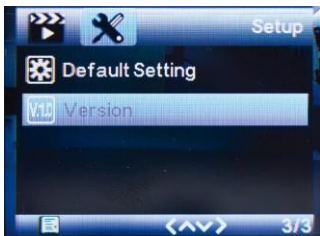 

## Video settings

In video mode, long press Mode (M) button.

<b>Resolution</b>	Select recording resolution
<b>Cyclic Record</b>	Select recording split duration, or deactivate the cyclic recording function

<b>WDR</b> Wide Dynamic Range	Activate / Deactivate WDR function  This function enables better image quality in high contrast environment
<b>Exposure</b>	Adjust image exposure level



<b>Motion Detection</b>	Activate / Deactivate motion detection trigger recording
<b>Audio</b>	Activate / Deactivate recording with sound
<b>Date Stamp</b>	Activate / Deactivate date stamp on the recording
<b>Gravity sensing</b> G-sensor	Adjust sensitivity level for the gravity sensor



<b>Parking monitor</b>	Adjust sensitivity level for the parking mode
<b>Rear camera mirroring</b>	Select the mirroring display mode (Flip rear camera image)



 
## Photo settings

In photo mode, long press Mode (M) button.

<b>Capture mode</b>	Select 'single' to take a shot instantly, or 'timer' to set the shot delay time
<b>Resolution</b>	Adjust photo resolution
<b>Sequence</b>	Activate / Deactivate burst shooting mode
<b>Quality</b>	Adjust image quality



<b>Sharpness</b>	Adjust sharpness level
<b>White Balance</b>	Adjust the white balance according to the environment
<b>Color</b>	Select image color effect
<b>ISO</b>	Select light sensitivity level

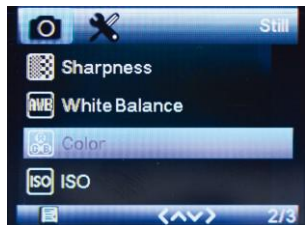

<b>Exposure</b>	Adjust image exposure level
<b>Anti-Shaking</b>	Activate / Deactivate image stabilizing
<b>Quick Review</b>	Select preview duration after taking a shot
<b>Date Stamp</b>	Activate / Deactivate date and time stamp on the photo



#### **FAQ:**

##### **Q: Why my dvr camera indicate “SD card Full”?**

- A:** 1) Please check if your memory card is original brand high speed Class 10 memory card, if you use some copy card like Class 4 or Class 6, it will indicate “SD card full” because it is not compatible. (Note please: DVR max support only 32GB card only)
- 2) Please check your dvr MENU settings if you have opened on Loop Recording this function already? You must open ON Loop Recording this function the previous video can be over writing.

- 3) Please check your dvr MENU settings if you have turn OFF G-Sensor, Parking Monitor & Motion Detect this 3 functions already at the same time? If G-Sensor is on, the file will be protected to lock that can not be over write, also dvr will auto go to recording all the time if Parking Monitor & Motion Detect is on, so the SD card will be full.
- 4) You must format to clear up your memory card file by hand at least 2~3 times within a month because the memory card inside will have some locked file that happen while driving at some emergency time, but this locked files can not be over write automatically. You must delete them by hand.

**Q: Why my dvr camera auto on & off continuously?**

**A:** Please check first if your dvr MENU settings open on Parking Monitor and G-Sensor this 2 function already? Normally if Parking Monitor is on the dvr will go to Parking Monitor mode, in this mode status, dvr will auto on once detect any touch or shake, then it will auto off if while no touch. So it will auto on & off continuously.

G-Sensor this function also will lock this status video file to avoid no over writes then it can keep as parking evidence. Please turn off this 2 function in MENU settings then try again. At the same time, please turn off Motion Detect this function in MENU settings also, because if Motion Detect is on, it will auto go to recording once have any movement in front.

**Q: Why my dvr always freeze while recording?**

**A:** Please check if your memory card is original brand high speed Class 10 memory card, if you use some copy card like Class 4 or Class 6, it will indicate SD card full or error because it is not compatible will happen freeze while recording.

So if your camera happen freeze problem, please try to use another different new original class 10 memory card to have a try, then you can identify the problem reason. If change a new card still can not be ok, that maybe the dvr camera firmware problem, please contact seller to upgrade firmware.

**Q: Why my dvr camera recording image not clear?**

**A:** Please check the video link that we upload online website link already, it is real link, so its recording quality image exactly same as product. In dvr camera MENU settings normally have 1080P, 720P, VGA option.

Highest quality image is 1080P, middle quality image is 720P, and lowest quality image is VGA. Please set as highest resolution 1080P when you do recording.

If you set resolution as VGA, video image quality will be not clear, please change to 1080P option in settings.

Besides, video quality image sometimes will be not so good if the surroundings not so good like at night or fog days.

**Note: we reserve the modification right of the device design and specifications without notice**

## **SPECIFICATION**

Screen size	2.31" TFT LCD Display
Camera	12.0MP 170° A+ grade ultra wide-angle 6G lens
Chipset	Novatek 96658 + SONY 323 Sensor
Night Vision	support night vision while car lighter on
Resolution	Front: Real FHD 1080P 1920x1080@30fps Rear: VGA 640x480@30fps
Language	English,Chinese,Italian,Spanish,Portugues,German,French, Russian,Japanese,Thai etc.
Function	WDR,Motion Detect,G-Sensor,Cycle Recording,Audio Record, Auto Power ON/OFF,Date Stamp,Parking Monitor