


# BS-PTT wireless PTT usage and pairing instructions

\*Require wireless hand microphone or helmet microphone to use with it together\*

Wireless PTT (only be compatible with our company's N series radios)

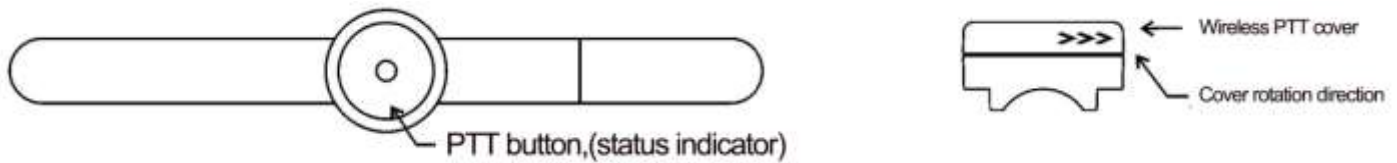

The wireless PTT has been waterproofed in the factory and can adapt to the complex outdoor use environment.

**Status indicator:** Short click the PTT button to enter pairing status, the indicator will flash quickly. Press the PTT button after pairing, the indicator light flashes slowly if connection fails, try to connect again within 1-2 seconds. If still unable to connect, the wireless PTT will enter the pairing status (indicator flashes quickly).

**Battery use and replacement:** The BS-PTT uses CR1632 button cell to supply power, open the APP device to check the battery voltage when it be in use, please replace the battery when the battery voltage is too low or can not be used. To replace the battery, unscrew the wireless PTT cover in the direction shown in the figure above, push out the battery with a non-metallic rod (remember the battery direction), reinstall the battery in the correct direction (the battery positive corresponds to the positive of the module), and put the lower cover back after checking for correct. Rotate the upper cover in the reverse direction of removal to use.

## -----Wireless PTT Pairing-----

### I. Use the mobile APP to pair

1. Press and hold the wireless PTT button, wait for the wireless PTT indicator to flash to enter the pairing state.
2. Open the APP to enter the settings, click the connection management to open the scan.
3. In the list of paired devices, the <PTT-1> existing means pairing is successful, release PTT then press it again to check whether the transmission icon on the app works or not. If there is no wireless

handset or wireless headset connected with radio, the app will remind <Wireless headset is not connected>, the wireless PTT works, but the transmission is prohibited without a sound receiving device.

4. If pairing failed please repeat doing above three steps, or the wireless PTT has been paired to the surrounding radio by mistake, turn off the other radio and re-pair with this unit.

## **II. Operating on the radio main body directly to pair**

1. Double-click the menu key on the main page or enter the menu and select <Peripheral Pairing> to enter the pairing status.

2. Long press the wireless PTT button till indicator flashes to enter the pairing status.

3. When the pairing is successful, the <Peripheral Pairing> will automatically turn off, release PTT then press it again to check whether the transmission icon on the app works or not. If there is no wireless handset or wireless headset connected with radio, the app will remind <Wireless headset is not connected>, the wireless PTT works, but the transmission is prohibited without a sound receiving device.

4. If pairing failed please repeat doing above three steps, or the wireless PTT has been paired to the surrounding radio by mistake, turn off the other radio and re-pair with this unit.

---

Product Name: BS-PTT wireless PTT

TX&RX frequency: 2.4~2.485GHz ISM band

Effective distance: 8 meters

Power supply: CR1632 button battery

Waterproof method: rainproof

Installation method: Fix the velcro on the index finger, the steering wheel or gear lever of the car, and the handlebar of the locomotive/single bike.

Weight: 20g

Size: main body  $\phi$ 23x13