




Цель:


Это инструмент, используемый сервисными техниками для установки поручней эскалатора. При правильном использовании этот инструмент устранит повреждение поручня в процессе установки.

Инструкции:


1. Зацепить наружную кромку поручня за направляющую, вставить Монтажных под поручень губы.

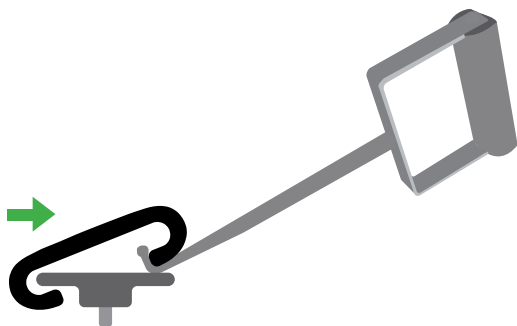


2. Потяните вниз и наружу, чтобы расположить шарик над губой и направляющей.

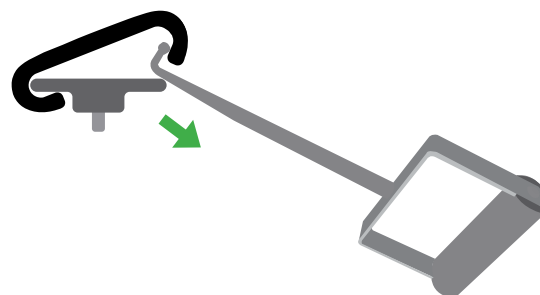

3. приложите давление к поверхности поручня во время скольжения

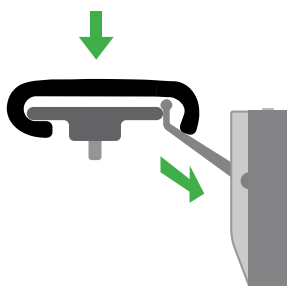


4. снимите его параллельно поручню и направляющей. Продолжайте движение по длине поручня.

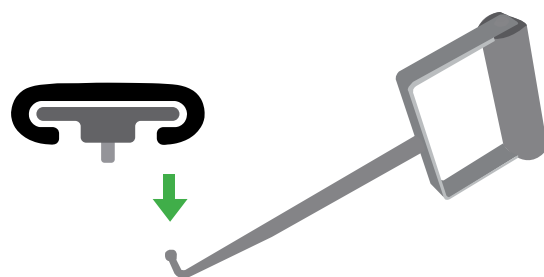

Все наши поручни подкреплены ведущей в отрасли гарантией. Для получения дополнительной информации о гарантии отсканируйте QR-код слева или посетите ZOLOTO@163.COM

Не сгибайте поручень сильно и не скручивайте его, так как он может деформироваться

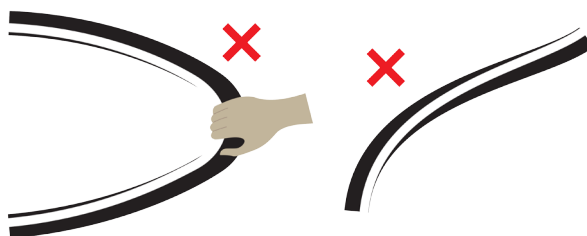




Purpose:


RapidRail is a tool used by Service Technicians to install escalator handrails. When used properly, this tool will eliminate damage to the handrail during the installation process.

Instructions:


1. Hook outside lip of handrail onto guide, insert RapidRail under handrail lip.

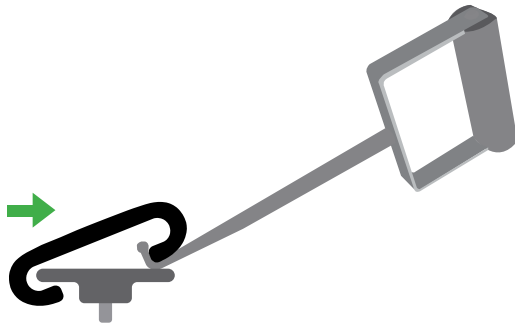


2. Pull down & out to position RapidRail ball above lip and guide.

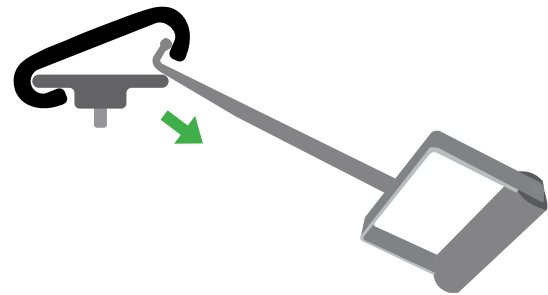

3. Apply pressure to handrail surface while sliding RapidRail parallel with handrail and guide. Continue for length of handrail.

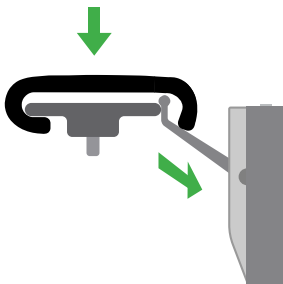

4. Remove RapidRail.

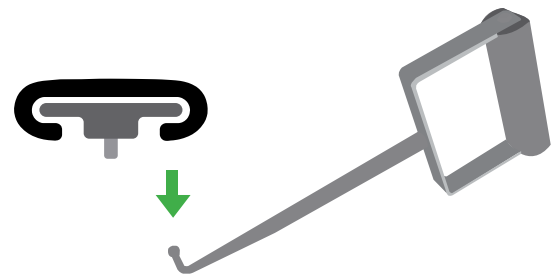

All of our handrails are backed by an industry leading warranty. For more warranty information, scan the QR code on the left or visit:
ZOLOTO@163.COM

Do not bend the handrail tightly or twist, as it may deform.

